

## FEATURES & FACILITIES

Following features are provided with this system.

1. Intercom dialing
2. Call transfer
3. Call hold and cancel hold
4. Call pick up
5. Call forward
6. Call- follow-me
7. Three party conference
8. Call barge in
9. Outgoing trunk call
10. Last number redial on trunk
11. Auto call back on trunk as well as extension
12. Call splitting (Extension as well as trunk)
13. Distinctive ringing
14. Auto redial
15. Single digit operator access
16. Hot line on extension
17. Door phone connection
18. Public announcement
19. Smart switch
20. Incoming call landing options
21. Day/night mode
22. External call diverted
23. Dynamic 95 lock with table
24. DID on incoming call programmable as per day/night mode
25. Voice guidance (1 channel). Optional
26. Global memory dial
27. RTC (real time clock) for accurate day/night mode shifting. Optional
28. Call back on transfer
29. Call parking
30. Weekly off
31. Caller line identification (Valid for CLI 308 only)

## FEATURES EXPLANATION

### INTERCOM DAILING

Lift the handset: listen to the system dial tone. Dial extension number. If called Extension is free ring back will be played and the called extension start ringing. When called party lifts the handset; both the parties will come in conversation. If the called extension is busy. You will get the engage tone.

### CALL TRANSFER

When you are in conversation with an extension or trunk you can transfer to the another extension. To transfer the call dial hf + extension no. The other party will be put on hold pleasant music.

### CALL HOLD AND CANCEL HOLD

To hold a call while talking on trunk or extension, dial hf+5 the other party will get hold on music. And you will get system dial tone to cancel hold' dial 5 when dial tone is on your extension.

### CALL PICK UP

When any extension is ringing and you want to pick that ringing extension, dial ' 42 or ' # .

### CALL FORWARD

When any person wants to move to some other place (extension) and wants all his calls be automatically transferred to the new extension, then he forward own extension to new extension. To activate this feature life the hand set listen to dial tone and dial 43+New extension number. In addition, listen to acceptance tone. After listening the acceptance tone on hook. Now all the calls made to your extension will ring at new extension. In addition, you will always being acceptance mode, but your extension will work as normal extension. To cancel the call forward mode. Life the hand set listen acceptance tone and dial 43; again, acceptance tone will be placed on your phone. Now goon hook. Now again lift the hand set you will listen to system dial tone.

### CALL FOLLOW ME

This feature works the same as call forward feature, However, the basis difference is that instead of dialing code from your extension, you need to dial code from other extension where you wants all you calls to be diverted. Code for call follows me is 48 + ext. no. (your extension). To call follow me dial 43/48 from extension where extension where acceptance tones is playing instead of system dial tone.

### THREE PARTY CONFERENCE

The three party conferences can be established in three different combinations.

- A. All three extension : Dial first extension number, and hold it while talking by flash + 5, you will get system dial tone. Now dial second extension number, when you are talking with the second extension dial flash + 37. Now have established the conference.
- B. One trunk and two extensions : While talking with trunk, hold the trunk party by flash + 5. Now dial desired extension number. When extension lifts. Dial flash +37 while talking with the extension. At this point conference is established.
- C. One extension and two trunks : While talking with one trunk by dialing flash + 5, you get system dial tone, Now dial second trunk number. Now dial flash +37. You will get system dial tone. Now dial second trunk number, now flash + 37. You will come in conference.

### EMERGENCY CALL CONSULT

If you dial any extension number and you get engage tone, then if you want you barge that call, then while in engage tone mode dial flash +7. You will be put in conversation with the busy extension and other extension will be put on hold.

### OUT GOING TRUNK, CALL

Every extension can access the trunk line by three ways. By dialing ' 0 or by dialing ' 8 or by selective trunk dialing 71,72,73. After listening to p&trunk tone dial desired telephone number.

### LAST, NUMBER REDIAL ON TRUNK

When the system dial tone mode dial 47 or \*, the number dialed on trunk will be redialed by system.

### AUTO CALL BACK

When you dial any trunk or extension. If this is busy and want to call back them. Then go on hook listen system dial tone and dial 41. In addition. Go on hook after listening to acceptance tone. Now when that extension or trunk is free. The ring will be placed to your extension connecting you to that extension or trunk. After lifting hand set while ringing you will get ring back tone in case of extension else get trunk dial tone you can dial external number.

### DISTINCTIVE RINGING

Extension to extension call will give single ring of 800 ms on and 2 sec off. In addition, trunk call ring will be double ring 400 ms 200 ms off 400 ms on and 2 sec off.

### AUTO REDIAL

When you dial on trunk and get the extension number busy. Now if you want to system to dial that number automatically and give you ring when call is through, then you can use this feature. When you get the extension number busy then cut and get dial tone and dial 78 number. Now system will dial the extension number after fixed duration many times. In addition, when the number is free it will place ring to extension. After you lift the handset when you will be connected to that party. To cancel auto radial dial 79 in system dial mode.

### SINGLE DIGIT OPERATOR ACCESS

You can set any extension as operator. Now any extension dial 9 then he will be connected to that number. How to set operator extension? Do this programming from master extension (ext. 21) 12 + MAPW + 11 + ext. no.

### HOT LINE ON EXTENSION / DOOR PHONE

Any extension programmed as hot extension when goes of hoot then the ring will be placed at the hot line/door hunting extension to see how to set hot line extension see programming guide.

### SMART SWITCH

Any electrical appliance can be switched turned on/off by using this feature. Dial following codes for this application:

49+00 to turn off the appliances

49+00 to turn off the appliances

### PUBLIC ANNOUNCEMENT / PAGING

To announce any message on the speaker port, dial 77 when in dial tone. Now start announcing. The message will be played on the speaker.

### BARGE IN WITH TONE

If any extension is in conversation with some other ext./trunk. You can barge in between two parties. To do this first dial the busy extension number, you will get camp on tone. Now go ON-HOOK and OFF-HOOK

and press 45.the other extension will listen a tone for 4 sec s and you will enter in conversation between the two parties.

### BARGE IN WITHOUT TONE

Dial the busy extension number, you will get camp on tone. Now go ON-HOOK and OFF-HOOK and press 44.you will immediately enter in conversation between the two parties, without any tone.

### CALLER LINE INDENTIFICATION

This feature is available only if you EPABX is CLI based system. Access all lines by taking dial tone and dialing a few numbers. After this procedure all calls will be displayed on the landing extension as well as the transferred extension.

### 5. Central memory number entry

any extension that has outgoing dial allowed can use this feature. To use this feature, extension after off hook, will dial any number between 50 to 65 then system will dial external number stored at the corresponding entry.

How to program central memory numbers in the memory?

12(A.T.) + MPSW(A.T.) + 06 + Entry No. + Telephone Num (A.T.)

Entry No. = 00 to 15.

Telephone Num. = External telephone number.

For example: if you want to dial number 9810012345 by dialing 58. You will need to store that number at entry no. 08. The programming will be

12 (A.T.) + MPSW(A.T.) + 06 + 08 + 9810012345

Now any extension dial 58. System will dial 9810012345 on trunk line.

Even f outgoing of an extension is blocked then also the extension can dial central memory numbers provided the extension is allowed for central memory dial see programming.